 


F1, F2, F2-RTC and F3 Taximeter Basic Operations

The taximeter has five keys: OP, K1, K2, K3, K4

The taximeter has three working modes: For Hire, Hired and Stopped.

The taximeter's working modes are selectable by pressing the OP button in the following sequence:



In any of the the above taximeter's working modes (**FOR HIRE, HIRED, STOPPED**), the other four keys **K1, K2, K3, K4** will exploit a different function, as described below:

Taxi in "For Hire"	
When the Taxi is parked or it moves without	K3 – Shows Date and Clock (RTC)
any passengers, the driver selects the For Hire position.	K4 – Shows Year (RTC)
Once the taxi starts the trip, the taxi driver selects the Hired position using the OP key.	OP – Selects Hired
Taxi in "Hired"	K1 – Next Tariff (if enabled)
The "Taxi" roof sign will turn off and the taximeter starts the fare calculation by distance or time.	K2 – Insert Extra No.1 (if enabled)
	K3 – Insert Extra No.2 (if enabled)
At the end of the trip, the taxi driver has to select the Stopped position using the OP	K4 – Clear Extras
key.	OP – Selects Stopped
Taxi in "Stopped"	K1 – Insert Special Extras (if enabled)
In this postion it may be possible to add	K2 – Insert Extra No.3 (if enabled)
other extras to the fare (if enabled).	K3 – Insert Extra No.4 (if enabled)
The taxi driver then presses OP to return to For Hire .	K4 – Add Extras to Fare
	OP – Selects For Hire

Turning the Meter Off

On the 32 Block F2, F2 RTC and F1 meters the meter can be turned off by pressing the **K2** and **K4** buttons at the same time. The only exception to this is on the 4 Block F2 where the **K1** button will turn the meter off.

The meter can be turned on again by pressing the **OP** button.

Memory Functions

The taximeter records and keeps data in 2 memory blocks, each divided into 7 sections. Block 1 can be read and erased freely, Block 2 can only be read. The memory sections correspond to:

Index 1 – Total Number of Trips

Index 2 - Total Units


Index 3 - Total Miles in Hired/Stopped

Index 4 - Total Miles

Index 5 – Hours in Waiting Time

Index 6 – Income by the Fare

Index 7 – Income by the Extras

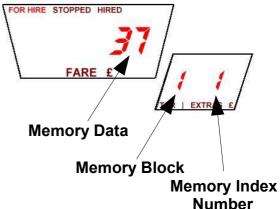

How to Read the Memory Content

- 1. Select the **For Hire** position.
- 2. Press **K2** and **K1** together
- 3. The "**For Hire**" sign will start blinking and the extras display will show the memory index.
- 4. **K2** increases the index number.
- 5. **K1** decreases the index number.
- 6. **K3** toggle between Block 1 and Block 2.
- 7. Press **OP** to end the memory reading and return to **For Hire**.

How to Erase the Memory Content

- 1. Select the **For Hire** position.
- 2. Press **K2** and **K1** together
- 3. The "For Hire" sign will start blinking .
- 4. Reach the memory index **6** by pressing the **K2** button
- 5. Press **K4**. This will erase Block 1's content.

